


HOW DO I INSTALL PAVING STONE?

Typical Cross Section

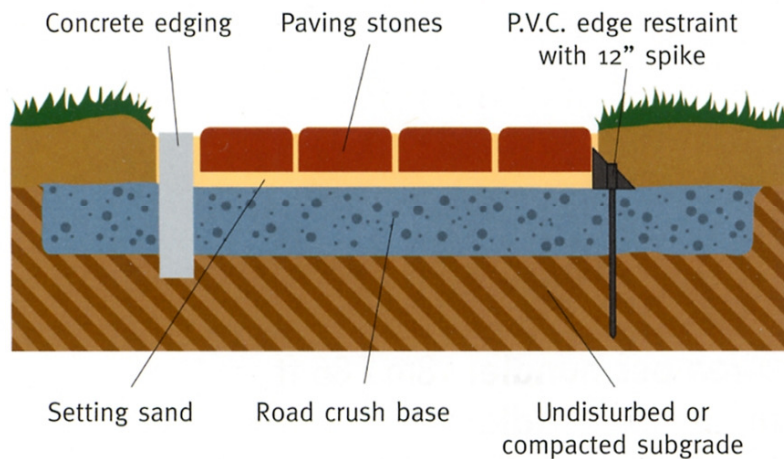

Paving Stone Installation

Patios & sidewalk blocks require approx. 4" of compact road crush.

- Excavate to required depth.
- Level and compact sub base.
- Place road crush down in 3" layers and compact using a plate tamper.
- Place 1" of coarse sand and level.
- Starting from a straight edge or a square corner, lay the stones on the sand.
- Cut stones to fit using a guillotine or a diamond blade cutter.
- Sweep sand across the surface and tamp using a plate tamper.
- Fill joints completely by sweeping fine sand across the stones.